

Valve Series 2B6/MAB6

High Pressure Ball Valve Operation and Maintenance Manual

Catalog: 02-0033ME

October 2015

aerospace
climate control
electromechanical
filtration
fluid & gas handling
hydraulics
pneumatics
process control
sealing & shielding



ENGINEERING YOUR SUCCESS.


Model # _____
Serial # _____
Drawing # _____

Order # _____
Mfg. Date _____

TABLE OF CONTENTS	PAGE
1.0 Introduction	2
2.0 Installation	2
3.0 Precautions	3
4.0 Maintenance	3
5.0 Assembly	3
6.0 Installation Summary Chart	4

Section 1.0
Introduction

The PAE high pressure ball valve can be used at pressure up to 20,000 psi (1380 bar) depending on the tubing connections and operating temperatures. The maximum operating media pressure at room temperature is etched on the valve body. The curve shown below can be used to find the maximum operating pressure at various media temperatures.

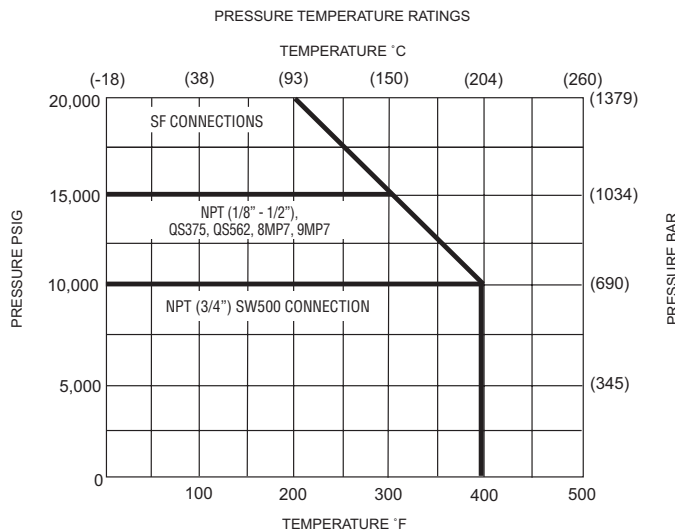

Section 2.0
Installation

The ball valve can be installed with the flow in either direction.


Refer to the instruction section of the Parker Autoclave Engineers' Valve, Fitting and Tubing Catalog for proper tubing connection installation.

Refer to the manufacturer's literature when using air or electric operators.

CAUTION

While testing has shown O-rings to provide satisfactory service life, both cyclic and shelf life may vary widely with differing service conditions, properties of reactants, pressure and temperature cycling, and age of the O-ring. Frequent inspection should be made to detect any deterioration and O-rings replaced as required.

Parker Autoclave Engineers reserves the right to alter the specifications given in this publication in line with our policy of continuous improvement. All general terms and conditions of sale including limitations of our liability, apply to all products and services sold.

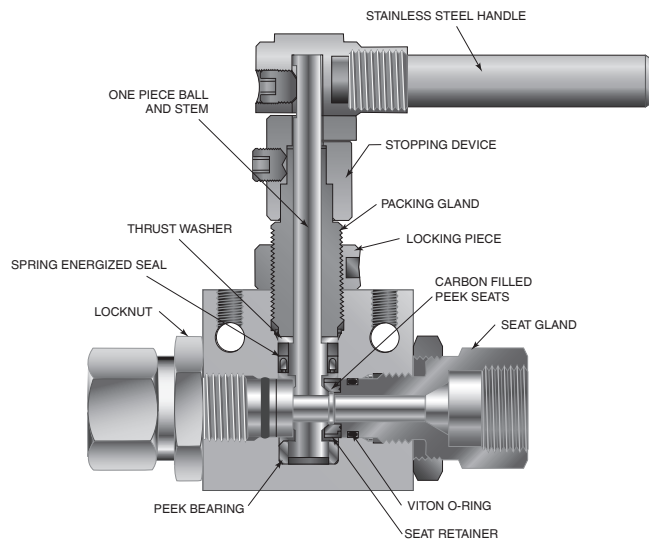

Section 3.0 Precautions

Hold the seat glands and bottom gland with a wrench when tightening or loosening the tubing connections.



WARNING

DO NOT OPERATE the valve with more than 150 in.-lbs. (17 Nm) applied to the seat glands.

Ball valves can trap pressurized media inside the valve. Relieve this pressure by turning the handle to the “half-open” position before disassembling the valve.

Section 4.0 Maintenance

Routine maintenance consists of tightening the seat glands periodically to compensate for seat wear. With no pressure in the valve, use the following procedures:

4.1 Seat Glands

4.1.1 Remove lock device from seat glands

4.1.2 While holding the seat glands and the body secure, loosen the tubing connections

4.1.3 With the handle in the “Full Open ” position, gradually tighten the glands alternating from one gland to the other in increments of 25 in. lbs. (2.8 Nm) until 150 in. lbs. (17 Nm) has been reached.

Do Not Apply More Than 150 In. Lbs. (17 Nm)

4.1.4 While holding seat gland secure with a wrench, tighten seat gland locknuts to the valve body.

Section 5.0 Assembly

General Assembly Procedure 3/8” Port 2-Way Ball Valve

1. Drop bottom bearing into center opening of the body.
2. Using packing gland, delicately slide the stem seal and backup onto the upper shoulder of stem. Lubricate the OD of seal with O-ring grease.
3. With the stem flat to the left, assemble packing gland with stem & stem seal with backup into the body center opening until the seal assembly fully enters the bore of the body.
4. Remove packing gland only.
5. Lubricate both sides of the thrust washer and packing gland threads with Jet Lube SS30¹ and slip the thrust washer onto the stem.
6. With the stem flat to the left, screw the packing gland into the body center opening until the opening of the ball is aligned properly. Back packing gland out one turn.
7. Assemble seat gland locknut onto seat gland.
8. Install O-rings onto the seat glands and lube the O-rings with O-ring grease.
9. Press seats into seat retainers and press these seat assemblies firmly onto the nose of the seat glands.
10. Lubricate seat gland threads with Jet Lube SS30¹ and insert seat glands into body hand tight on both sides.
11. Keeping ball in full open position, pre-torque seat glands to 30 ft. lbs. (41 Nm) in 10 ft. lb.(13.5 Nm) alternating increments.
12. Back seat glands off on both sides and retorque to 150 in. lbs. (17 Nm) in 25 in. lbs.(2.8 Nm) alternating increments.
13. Tighten seat gland locknuts to the valve body while holding seat glands with wrench.
14. Hand tighten packing gland.
15. Assemble locking piece onto packing gland and tighten locking piece to body with a spanner wrench.
16. Position stopping device loosely on top of packing gland and attach the handle onto the flat of the stem. Turn stopping device clockwise until it hits the handle hub. Tighten the (2) set screws on the stopping device onto the packing gland.

¹ SS30 is a registered trademark of Jet-Lube Corporation

Section 6.0 Installation Summary Chart

Valve Series	Connection	Seat gland Hex Size in (mm)	Locknut Hex Size in (mm)	O-Ring Part Number			Stem Seal (qty)	Seat PEEK (qty)	Tube Gland Hex Size in (mm)	Tube Gland Torque ft-lbs. (Nm)
				Viton (qty)	-EPR (qty)	Kal-Rez Comp. 3018 (qty)				
2B6	SW500	1.38 (34.9)	1.75 (44.5)	90027 (2)	90477 (2)	90385 (2)	90026 (1)	101F-0766 (1)	.94 (23.8)	*
	SF375CX	1.38 (34.9)	1.75 (44.5)	90027 (2)	90477 (2)	90385 (2)	90026 (1)	101F-0766 (1)	.63 (15.9)	30 (40.7)
	SF562CX20	1.38 (34.9)	1.75 (44.5)	90027 (2)	90477 (2)	90385 (2)	90026 (1)	101F-0766 (1)	.94 (23.8)	55 (74.6)
	SF750CX20	1.38 (34.9)	1.75 (44.5)	90027 (2)	90477 (2)	90385 (2)	90026 (1)	101F-0766 (1)	1.19 (30.2)	90 (122)
	1/4" FNPT	1.38 (34.9)	1.75 (44.5)	90027 (2)	90477 (2)	90385 (2)	90026 (1)	101F-0766 (1)	-	-
	3/8" FNPT	1.38 (34.9)	1.75 (44.5)	90027 (2)	90477 (2)	90385 (2)	90026 (1)	101F-0766 (1)	-	-
	1/2" FNPT	1.38 (34.9)	1.75 (44.5)	90027 (2)	90477 (2)	90385 (2)	90026 (1)	101F-0766 (1)	-	-
	3/4" FNPT	1.75 (44.5)	2.25 (57.2)	90027 (2)	90477 (2)	90385 (2)	90026 (1)	101F-0766 (1)	-	-
	QS375	1.38 (34.9)	1.75 (44.5)	90027 (2)	90477 (2)	90385 (2)	90026 (1)	101F-0766 (1)	.69 (17.5)	**
	QS562	1.38 (34.9)	1.75 (44.5)	90027 (2)	90477 (2)	90385 (2)	90026 (1)	101F-0766 (1)	1.0 (25.4)	**
MAB6	1/2" MPI	1.38 (34.9)	1.75 (44.5)	90027 (2)	90477 (2)	90385 (2)	90026 (1)	101F-0766 (1)	.94 (23.8)	**
	9/16" MPI	1.38 (34.9)	1.75 (44.5)	90027 (2)	90477 (2)	90385 (2)	90026 (1)	101F-0766 (1)	1.0 (25.4)	**

* Torque wrench not required for PAE Speedbite tube connections. Tighten gland until sleeve begins to grip tubing then 1-1/4 turn.

** Use preset tool. For **MPI**- then tighten 1/2 turn in connection. For **QSS**- then tighten 1/4 turn in connection.

WARNING

FAILURE, IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from Parker Hannifin Corporation, its subsidiaries and authorized distributors provide product and/or system options for further investigation by users having technical expertise. It is important that you analyze all aspects of your application and review the information concerning the product or system in the current product catalog. Due to the variety of operating conditions and applications for these products or systems, the user, through its own analysis and testing, is solely responsible for making the final selection of the products and systems and assuring that all performance, safety and warning requirements of the application are met. The products described herein, including without limitation, product features, specifications, designs, availability and pricing, are subject to change by Parker Hannifin Corporation and its subsidiaries at any time without notice.

Offer of Sale

The items described in this document are available for sale by Parker Hannifin Corporation, its subsidiaries or its authorized distributors. Any sale contract entered by Parker will be governed by the provisions stated in Parker's standard terms and conditions of sale (copy available upon request).

© 2015 Parker Hannifin Corporation | Autoclave Engineers is a registered trademark of the Parker Hannifin Corporation

02-0033ME

October 2015



Instrumentation Products Division
Autoclave Engineers Operation
8325 Hessinger Drive
Erie, PA 16509-4679
Tel: 814 860 5700
Fax: 814 860 5811
www.autoclave.com

Instrumentation Products Division
Autoclave Engineers Operation, Houston
15340 Vantage Parkway, East
Houston, TX 77032
Tel: 281 987 3828
Fax: 281 987 2318

Parker Hannifin Manufacturing Ltd.
Instrumentation Products Division, Europe
Industrial Estate Whitemill
Wexford, Republic of Ireland
Tel: 353 53 914 1566
Fax: 353 53 914 1582

Parker Hannifin Manufacturing Ltd.
Instrumentation Products Division, Europe
Riverside Road, Pottington Business Park
Barnstaple, UK, EX31 1NP, UK
Tel: 44 1271 313131
Fax: 44 1271 373636

Caution! Do not mix or interchange component parts or tubing with those of other manufacturers. Doing so is unsafe and will void warranty.

Caution! Parker Autoclave Engineers Valves, Fittings, and Tools are not designed to interface with common commercial instrument tubing and are designed to only connect with tubing manufactured to Parker Autoclave Engineers AES specifications. Failure to do so is unsafe and will void warranty.

ISO-9001 Certified